
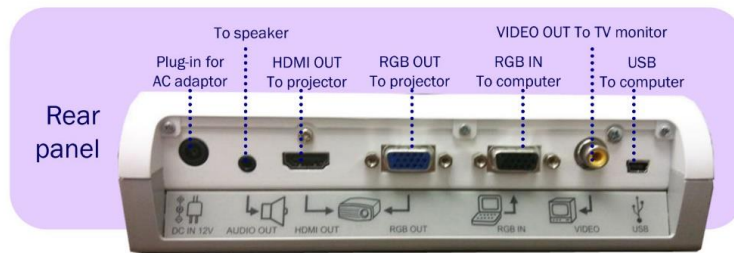
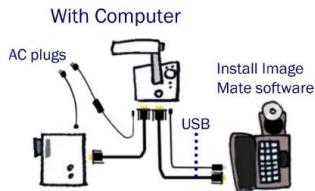


QUICK TRAINING GUIDE: TT-12i

Training Video (TT-12): <http://www.elmoussa.com/tt-12-interactive-document-camera>

1 Configure your classroom

Basic Configuration

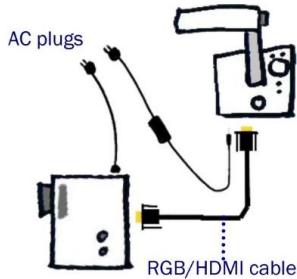

2 Power on the TT-12i Zoom and Focus


Twist the zoom knob to zoom in/out



Press the Auto-focus button to focus after zooming

3 Rotate

Rotate the camera column close to a small object, turn the camera head horizontally to view students giving a presentation, speech, etc.

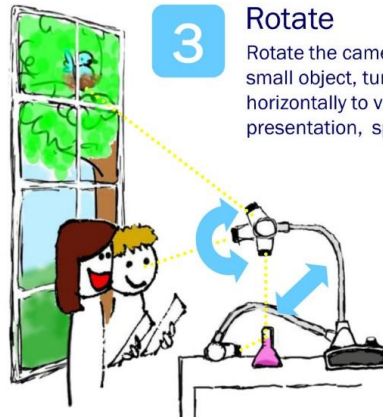

Rotate the arm 180° and position camera head downward for left-handed users.




4 Capture and Review

A. Insert SD card/USB flash drive

B. Capture image

C. Review saved images

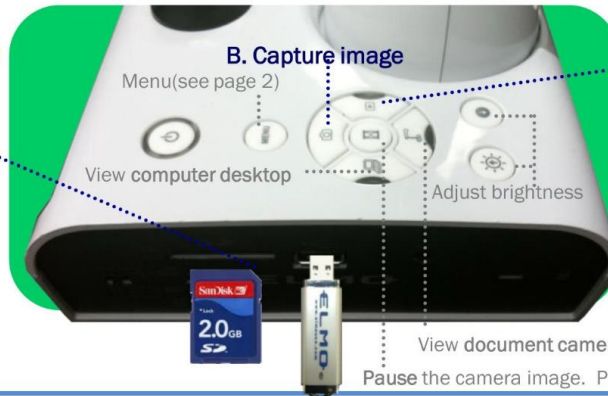

Use buttons to scroll and select.

Pause the camera image. Press again to unfreeze.

5 Control the TT-12i from anywhere in the classroom

Power - Red button at the top.

Zoom - Orange directional pad.

Adjust brightness - Buttons with sun and snowflake icons.

View images/videos from SD card - Blue buttons with image and video icons.

Take a picture and save to SD card - Green button.

Record video - Yellow button.

Auto-focus: Press after zooming.

The **Highlight** allows you to emphasize a specific area of the image. Move the highlight using arrow buttons [▲][▶][▼][◀].

The **Mask** feature lets you to hide the answer to a written problem or following along when reading text, etc. To move the mask, use [▲][▶][▼][◀].

Press the **Scroll** to zoom instantly then use [▲][▶][▼][◀] to scroll around your image.

Compare picture: Compare the live image to a saved image from the SD card.

View computer desktop

Return to live image

TT-12i mic records audio when recording video.

6 Additional Menu features

Press the Menu button to **customize preferences** and apply special modes such as Mosaic and Microscope.

Use **Microscope mode** with the *Optional Microscope Attachment* to display slide images for the entire class to see at once.

Capture students' curiosity by applying the **Mosaic** feature, letting them predict the displayed object.

7 Install Image Mate software

Connect the TT-12i to a computer and install Image Mate to **save images and videos to the computer**. You can also **annotate on the live image** and record **time-lapse photography** (set interval time in Settings before beginning time-lapse)

Remote to control the document camera from the desktop

Open previously saved files

Select the time-lapse interval, file format, etc.

Take a picture and save to computer

View live image

Record video and time-lapse photography

ELMO

Download Image Mate at <http://www.elmoussa.com/t-12i-interactive-document-camera>