


The MimioView™ document camera works seamlessly with MimioStudio™ classroom software to display documents, 3-D objects, and microscope slides for your entire class to view. You can use the MimioView camera to display still images or live video.

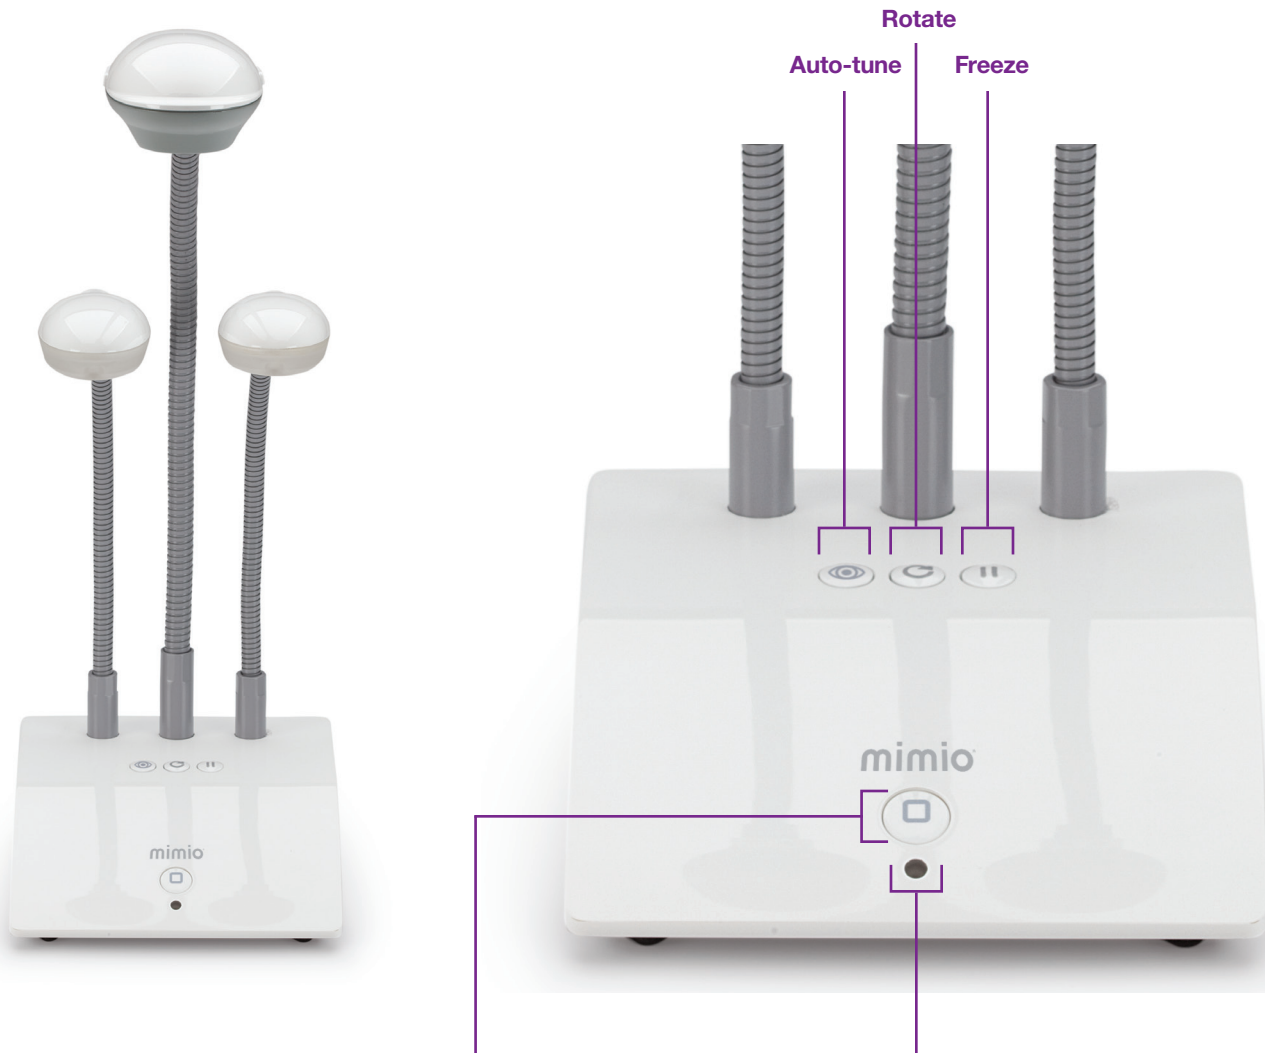

View Button

Press to open the MimioStudio™ View window and turn the camera and lights on.

Press again to close the MimioStudio View window and turn the camera and lights off.

Status Light

Off: Not receiving power; USB cable is not connected, or computer is turned off.

Solid Green: MimioView is connected and receiving power; MimioStudio software is running.

Flashing Green: MimioView is connected and receiving power; MimioStudio software is not running.